

Transmitter and Receiver Compatible Table

| RF-MODE | FHSS 5 | FHSS 4 | FHSS 4/FHSS 3 | FHSS 3 | | FH-E | FHSS 2 |
|------------------------|--------|---------------------------------------|-------------------------|---------|----------------------------|---------|-------------------------------|
| Product Name | RX-491 | RX-482 RX-472/47T RX-461/462 *1 | RX-481/481 WP RX-471 | RX-451R | RX-451 RX-381 RX-380 | RX-391W | RX-371W RX-37W RX-442DS |
| M17 | ○ | ○ | ○ | ○ | ○ | × | × |
| M12S/M12S-RS | × | ○ | ○ | ○ | ○ | × | × |
| Exzes ZZ | × | ○ | ○ | ○ | ○ | × | × |
| MT-44 | × | ○ | ○ | ○ | ○ | × | × |
| MT-S | × | ○ | ○ | ○ | ○ | × | × |
| MX-6 | × | × | × | × | × | ○ | × |
| M12 | × | ○ | ○ | ○ | ○ | × | × |
| Exzes Z | × | ○ | ○ | ○ | ○ | × | × |
| EXZES X/M11X | × | × | ○ | ○ | ○ | ○ | ○ |
| MT-4S | × | ○ | ○ | △ (*2) | ○ | × | ○ |
| MX-3X/GEMINI X | × | × | △ (*3) | △ (*3) | ○ | × | ○ |
| MX-V/BLAZER G/MX-3G | × | × | × | × | × | × | ○ |
| M11/EXZES PLUS+TM-222D | × | × | × | × | × | × | ○ |

*1:RX-461 and 462 are NOT compatible with SSL System

*2 NOT compatible with SSR mode

*3 NOT compatible with SHR and SSR mode